



Launch Controller

Loud Piezo Buzzer



Ethernet Connects to Launch Pad



IMPLS LAUNCHER



All the wires wrap conveniently around the Wired Console box.



Wired Console

12v Li-po Battery

Wired console box connects directly to the battery.




Indicator lights on battery show you if it is charged up.



Battery has socket to connect to wired console box.




Launch Rod quickly attaches to the threaded post

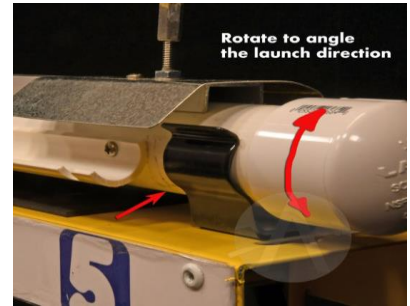

Rotate to angle the launch direction



The launch rods store conveniently inside the launch pad

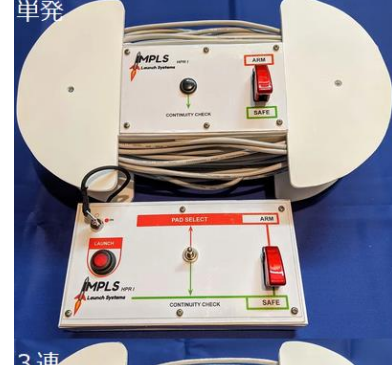

IMPLS(USA)
1-3-5連発ランチャー

ケイテック/KTEK
 湘南ロケット
 eMail: ktekinfo@ktek.jp
<https://ktek.jp>

Photo-apogee-web